



Robert Bosch GmbH
Power Tools Division
70745 Leinfelden-Echterdingen
Germany

www.bosch-garden.com

F 016 L70 777 (2010.10) O / 18 XXX



3 165140 707770

ART

 

23 LI | 26 LI



BOSCH

en Original instructions



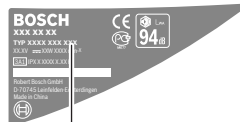

16

1

2

3

4

5

6


7

8

9





15





10 11 12



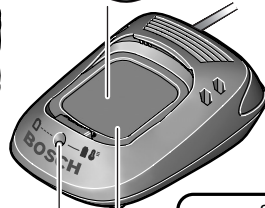


13 14



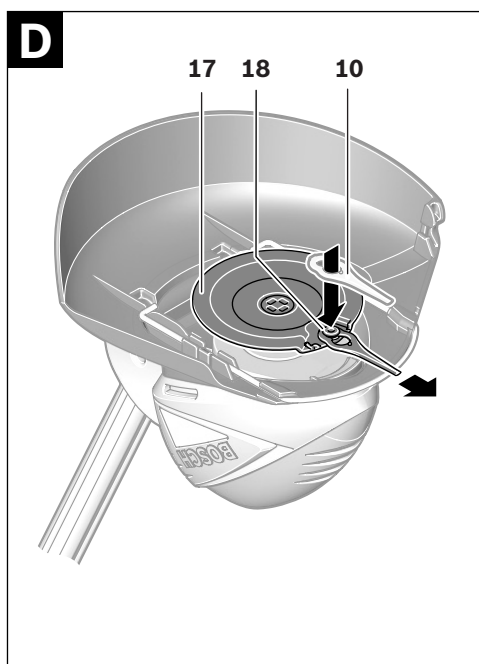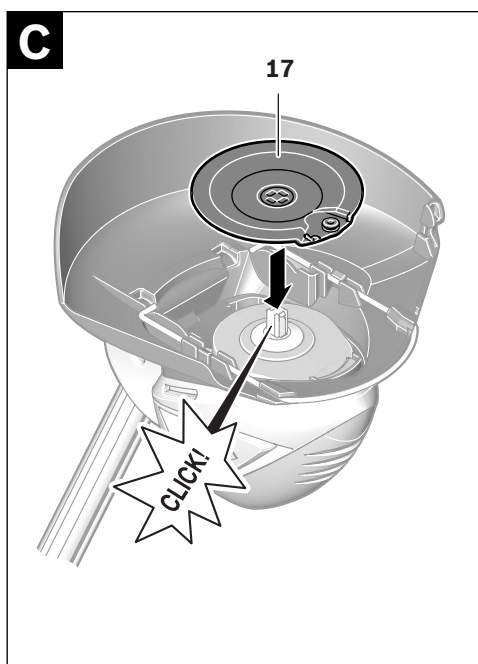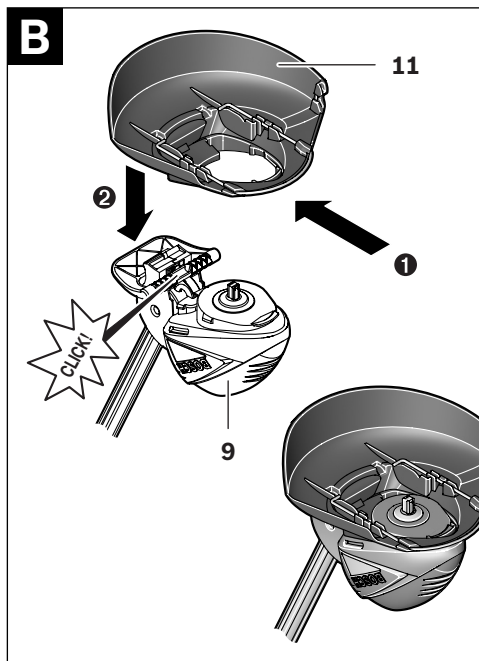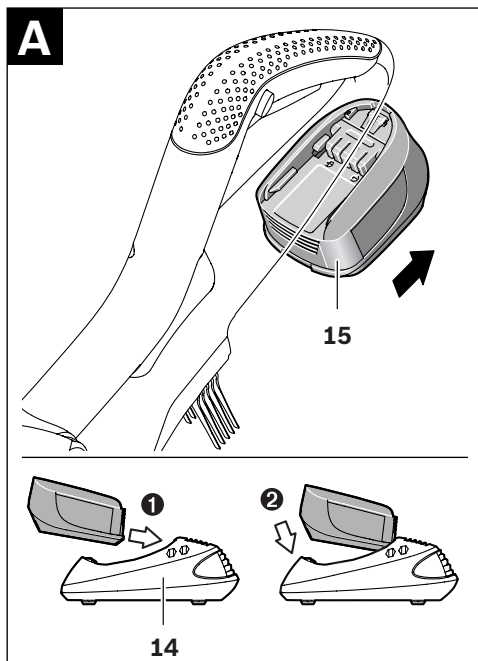

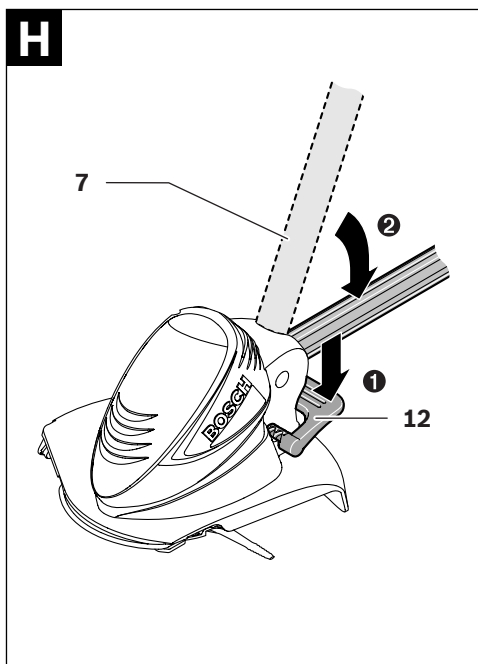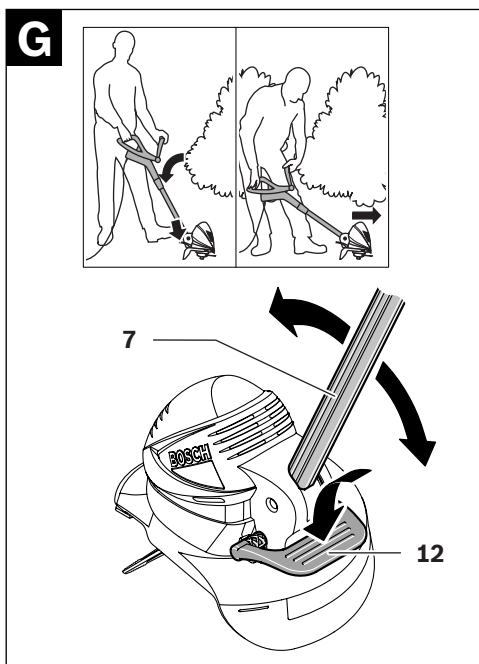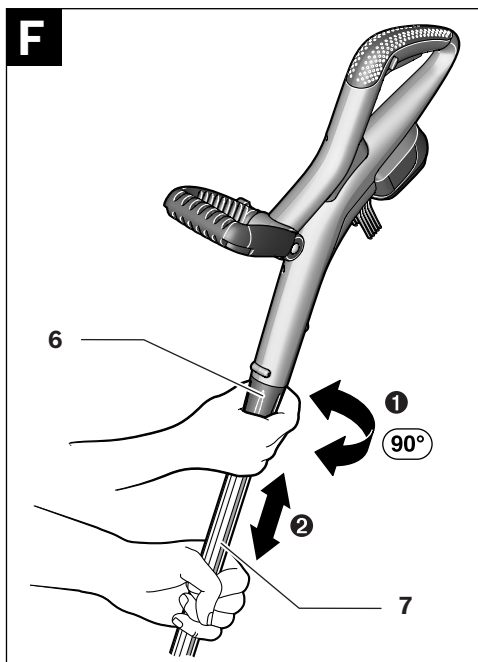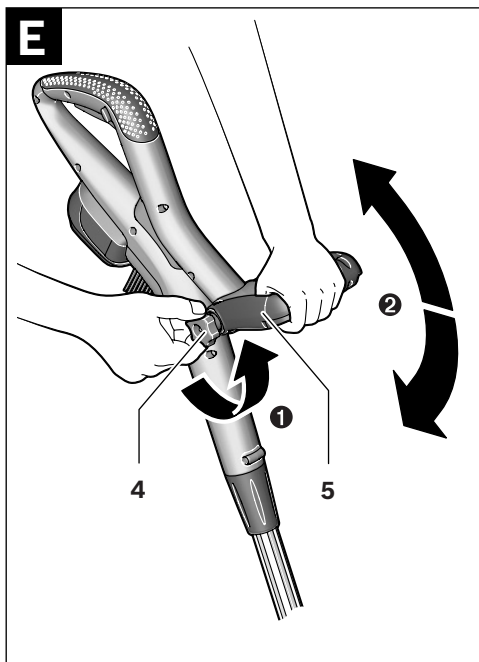

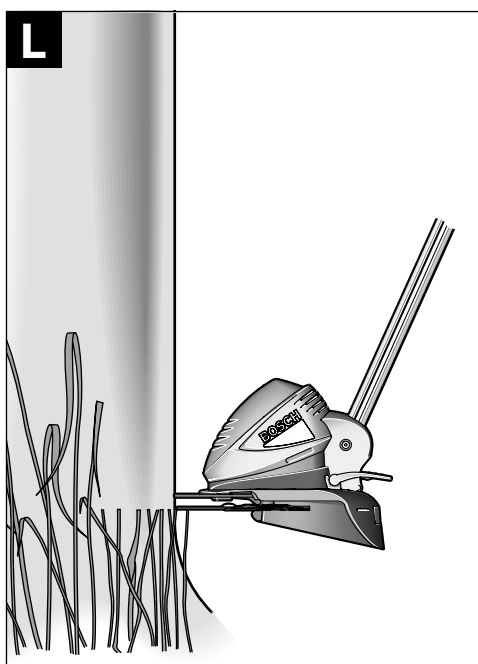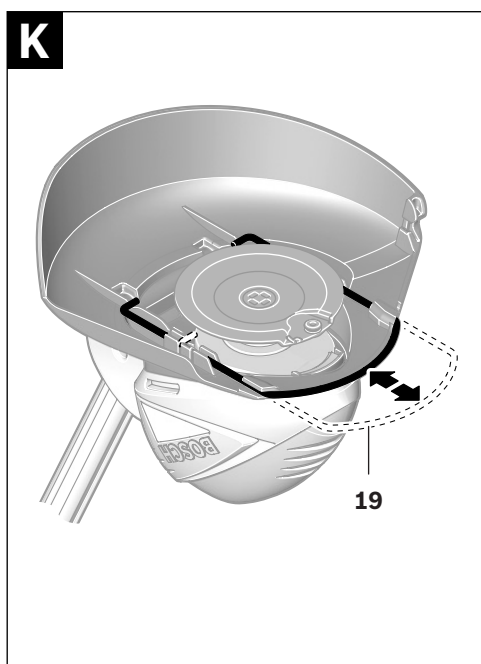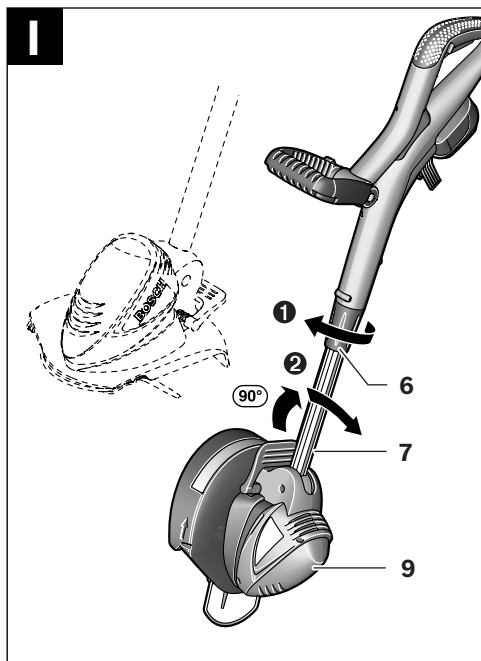

Safety Notes

Warning! Read these instructions carefully, be familiar with the controls and the proper use of the machine. Please keep the instructions safe for later use!

Explanation of symbols on the cordless trimmer




General hazard safety alert.



Read instruction manual.



Wear eye protection.

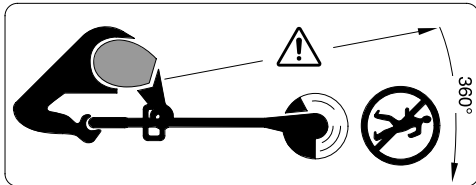

Pay attention that bystanders are not injured through foreign objects thrown from the machine.

Keep bystanders a safe distance away from the machine.



Remove battery before adjusting or cleaning, and before leaving the machine unattended for any period.



Do not work in the rain or leave the cordless trimmer outdoors whilst it is raining.



Do not use the charger if the cord is damaged.

Machine-specific Safety Warnings

- ▶ This tool is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
- ▶ Never allow children or people unfamiliar with these instructions to use the cordless trimmer. Local regulations may restrict the age of the operator. When not in use store the trimmer out of reach of children.
- ▶ Do not operate the cordless trimmer when barefoot or wearing open sandals; always wear substantial footwear and long trousers.
- ▶ Never operate the machine while people, especially children or pets, are nearby.
- ▶ The operator or user is responsible for accidents or hazards occurring to other people or their property.
- ▶ Wait until the blade has completely stopped before touching it. The blade continues to rotate after the trimmer is switched off; a rotating blade can cause injury.
- ▶ Work only in daylight or in good artificial light.
- ▶ Avoid operating the cordless trimmer in wet grass, where feasible.
- ▶ Switch off when transporting the cordless trimmer to and from the area to be worked on.
- ▶ Switch on the cordless trimmer with hands and feet well away from the rotating blade.
- ▶ Do not put hands or feet near the rotating blade.
- ▶ Never use a metal blade in this trimmer.
- ▶ Never operate the cordless trimmer with damaged guards or shields or without guards or shields in position.
- ▶ Before using the machine and after impact, check for signs of wear or damage, and repair if necessary.

- ▶ Inspect and maintain the cordless trimmer regularly.
- ▶ Have the cordless trimmer repaired only by an authorised customer service agent.
- ▶ Always ensure that the ventilation slots are kept clear of debris.
- ▶ Switch off and remove the battery:
 - whenever you leave the machine untended for any period
 - before replacing the blade
 - before cleaning or working on the cordless trimmer.
- ▶ **Ensure the switch is in the off position before inserting battery pack.** Inserting the battery pack into machines that have the switch on invites accidents.
- ▶ Store the machine in a secure dry place out of the reach of children. Do not place other objects on top of the machine.
- ▶ Replace worn or damaged parts for safety.
- ▶ Ensure replacement parts fitted are Bosch approved.
- ▶ **Use only Bosch battery packs intended specifically for the machine.** Use of any other battery packs may create a risk of injury and fire.
- ▶ **Do not open the battery.** Danger of short-circuiting.



Protect the battery against heat, e. g., against continuous intense sunlight, fire, water, and moisture. Danger of explosion.

- ▶ **When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- ▶ **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause skin irritation or burns.

- ▶ **In case of damage and improper use of the battery, vapours may be emitted. Provide for fresh air and seek medical help in case of complaints.** The vapours can irritate the respiratory system.
- ▶ **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- ▶ **When the battery is defective, liquid can escape and come into contact with adjacent components. Check any parts concerned.** Clean such parts or replace them, if required.
- ▶ **Use the battery only in conjunction with your Bosch garden product.** This measure alone protects the battery against dangerous overload.

Safety Warnings for battery chargers



Keep the battery charger away from rain or moisture. Penetration of water in the battery charger increases the risk of an electric shock.

- ▶ **Only charge Bosch lithium ion batteries or batteries installed in Bosch products with the voltages listed in the technical data.** Otherwise there is danger of fire and explosion.
- ▶ **Keep the battery charger clean.** Contamination can lead to danger of an electric shock.
- ▶ **Before each use, check the battery charger, cable and plug. If damage is detected, do not use the battery charger. Never open the battery charger yourself. Have repairs performed only by a qualified technician and only using original spare parts.** Damaged battery chargers, cables and plugs increase the risk of an electric shock.
- ▶ **Do not operate the battery charger on easily inflammable surfaces (e. g., paper, textiles, etc.) or surroundings.** The heating of the battery charger during the charging process can pose a fire hazard.
- ▶ **Children should be supervised to ensure that they do not play with the battery charger.**

► **Children or persons with mental or physical limitations may only use the charger under supervision or after having been instructed.**

A thorough introduction reduces operating errors and injuries.

Products sold in **GB only**: Your product is fitted with an BS 1363/A approved electric plug with internal fuse (ASTA approved to BS 1362). If the plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place by an authorised customer service agent. The replacement plug should have the same fuse rating as the original plug. The severed plug must be disposed of to avoid a possible shock hazard and should never be inserted into a mains socket elsewhere.

Functional Description



Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Intended Use

The machine is intended for the cutting of grass and weeds under bushes, as well as on slopes and edges that can not be reached with the lawn mower.

Intended use is related to operation within 0 °C and 40 °C ambient temperature.

Delivery Scope

Carefully remove the garden product from its packaging and check if the following parts are complete:

- Cordless trimmer
- Blade guard
- Adjustable handle (fitted)
- Cutting disc
- Blade
- Operating instructions

Battery and charger are included in certain executions.

When parts are missing or damaged, please contact your dealer.

Product Features

The numbering of the garden product features refers to the illustration of the garden product on the graphics page.

- 1** On/Off switch
- 2** Lock-off button for On/Off switch
- 3** Handle
- 4** Handle screw
- 5** Adjustable handle
- 6** Adjusting collar
- 7** Shaft
- 8** Ventilation slots
- 9** Trimmer head
- 10** Blade
- 11** Blade guard
- 12** Foot pedal for trimmer-head angle adjustment
- 13** LED indicator
- 14** Battery charger
- 15** Battery
- 16** Serial number
- 17** Cutting disc
- 18** Pin
- 19** Plant protector

Accessories shown or described are not part of the standard delivery scope of the product. A complete overview of accessories can be found in our accessories program.

Technical Data

| Cordless Trimmer | | ART 23 LI | ART 26 LI |
|---|---|---------------|---------------|
| Article number | | 3 600 H78 K.. | 3 600 H78 L.. |
| No-load speed | min ⁻¹ | 7500 | 7400 |
| Adjustable handle | | ● | ● |
| Trimmer-head angle adjustment/edging adjustment | | ● | ● |
| Cutting diameter | cm | 23 | 26 |
| Weight according to EPTA-Procedure 01/2003 | kg | 2.3 | 2.4 |
| Serial number | See serial number 16 (type plate) on the machine | | |
| Battery | | Li-Ion | Li-Ion |
| Article number | | | |
| – 1.3 Ah | | 2 607 336 037 | 2 607 336 039 |
| – 1.5 Ah | | – | 2 607 336 207 |
| Rated voltage | V= | 14.4 | 18 |
| Capacity | | | |
| – 2 607 336 037/... 039 | Ah | 1.3 | 1.3 |
| – 2 607 336 207 | Ah | – | 1.5 |
| Number of battery cells | | | |
| – 2 607 336 037/... 039 | | 4 | 5 |
| – 2 607 336 207 | | – | 5 |
| Charging period (battery discharged) | min | 60 – 180 | 60 – 180 |
| Battery Charger | | AL 2215 CV | AL 2215 CV |
| Article number | EU | 2 607 225 471 | 2 607 225 471 |
| | UK | 2 607 225 473 | 2 607 225 473 |
| | AU | 2 607 225 475 | 2 607 225 475 |
| Charging current | mA | 1500 | 1500 |
| Allowable charging temperature range | °C | 0 – 45 | 0 – 45 |
| Weight according to EPTA-Procedure 01/2003 | kg | 0.4 | 0.4 |
| Protection class | | □ / II | □ / II |

Please observe the article number on the type plate of your garden product. The trade names of the individual garden products may vary.

| Cordless Trimmer | | ART 23 LI | ART 26 LI |
|--|----|---------------|---------------|
| Battery Charger | | AL 2204 CV | AL 2204 CV |
| Article number | EU | 2 607 225 273 | 2 607 225 273 |
| | UK | 2 607 225 275 | 2 607 225 275 |
| | AU | 2 607 225 277 | 2 607 225 277 |
| Charging current | mA | 430 | 430 |
| Allowable charging temperature range | °C | 0–45 | 0–45 |
| Weight according to EPTA-Procedure 01/2003 | kg | 0.7 | 0.7 |
| Protection class | | □ / II | □ / II |

Please observe the article number on the type plate of your garden product. The trade names of the individual garden products may vary.

Noise/Vibration Information

Measured sound values determined according to 2000/14/EC (1.60 m height, 1 m distance away).

Typically the A-weighted noise levels of the product are: Sound pressure level 80 dB(A); sound power level 88 dB(A). Uncertainty K=5 dB.

Vibration total values (triax vector sum) determined according to EN 60335:

Vibration emission value $a_h = 4 \text{ m/s}^2$,
Uncertainty K=2.5 m/s^2 .

Declaration of Conformity

We declare under our sole responsibility that the product described under “Technical Data” is in conformity with the following standards or standardization documents: EN 60335 (battery powered product) and EN 60335 (battery charger) according to the provisions of the directives 2006/95/EC, 2004/108/EC, 2006/42/EC, 2000/14/EC.

2000/14/EC: Guaranteed sound power level 94 dB(A). Conformity assessment procedure according to Annex VI.

Equipment category: 33

Notified body: SRL, Sudbury England, Nr. 1088

Technical file at:
Bosch Lawn and Garden Ltd., PT-LG/EAE,
Stowmarket, Suffolk IP14 1EY, England

 07

Dr. Egbert Schneider
Senior Vice President
Engineering

Dr. Eckerhard Strötgen
Head of Product
Certification

Robert Bosch GmbH, Power Tools Division
D-70745 Leinfelden-Echterdingen
22.10.2010

Assembly

For Your Safety

- ▶ **Warning: Switch off and remove battery from machine before adjusting or cleaning.**
- ▶ **The blade continues to rotate for a few seconds after the cordless trimmer is switched off.**
- ▶ **Caution – do not touch the rotating blade.**

Battery Charging

- ▶ **Observe the mains voltage!** The voltage of the power supply must correspond with the data given on the nameplate of the battery charger. Battery chargers marked with 230 V can also be operated with 220 V.

Use only the charging unit supplied. Only this charging unit is matched to the lithium-ion battery used in the product.

The battery is equipped with temperature monitoring that allows charging only in the temperature range between 0 °C and 45 °C. In this manner, a high battery service life is achieved.

Note: The battery is supplied partially charged. To ensure full capacity of the battery, completely charge the battery in the battery charger before using your power tool for the first time.

The lithium ion battery can be charged at any time without reducing its service life. Interrupting the charging procedure does not damage the battery.

Removing the Battery (see figure A)

Press the battery unlocking button and pull out the battery **15** toward the rear.

Charging Procedure (see figure A)

The charging procedure starts as soon as the mains plug is plugged into the socket and the battery is then inserted into the battery charger **14**.

 
Firstly, place the battery **15** as shown in the figure onto the front of the battery charger (●) and then press the battery **15** down at the rear (●). To remove the battery, proceed in reverse order.

Due to the intelligent charging method, the charging condition of the battery is automatically detected and the battery is charged with the optimum charging current, depending on battery temperature and voltage.

This gives longer life to the battery and always leaves it fully charged when kept in the charger for storage.

Note: The charging procedure is only possible when the battery temperature is within the allowable charging temperature range, see section “Technical Data”.

Flashing Battery Charge Indicator 13



The charging procedure is signalled by a **flashing** battery charge indicator **13**.

Continuous Lighting of the Battery Charge Indicator 13



Continuous lighting of the battery charge indicator **13** indicates that the battery is fully charged **or** that the tem-

perature of the battery is not within the allowable charging temperature range, and cannot be charged for this reason. The battery is charged as soon as the allowable charging temperature range is reached.

When the battery is not inserted, **continuous lighting** of the battery charge indicator **13** indicates that the mains plug is inserted in the socket and that the battery charger is ready for operation.

Charging Advice

With continuous or several repetitive charging cycles without interruption, the charger can warm up. This is not meaningful and does not indicate a technical defect of the battery charger.

A significantly reduced working period after charging indicates that the battery is used and must be replaced.

The “Electronic Cell Protection (ECP)” protects the lithium ion battery against deep discharging. When the battery is run down or discharged, the garden product is shut off by means of a protective circuit: The blade no longer moves.

⚠ WARNING Do not continue to press the On/Off switch after the garden product has been automatically switched off. The battery can be damaged.

Product Assembly

- Do not insert the battery until the cordless trimmer is completely assembled.
- Ensure that the cordless trimmer is assembled in the following order:

Mounting the Blade Guard (see figure B)

Place the blade guard **11** on the trimmer head **9**.

- ❶ Hook the blade guard onto the trimmer head and push it toward the rear.
- ❷ Press the blade guard downward until securely latched (click).

Mounting the Cutting Disc/Blade

Press the cutting disc **17** onto the drive shaft (click). (see figure C)

Position the blade **10** onto the pin **18**, push it down and pull it outward until it engages. (see figure D)

Operation

Starting

- ▶ **Remove stones, loose pieces of wood and other objects from the cutting area.**
- ▶ **The blade continues to rotate for a few seconds after the cordless trimmer is switched off. Allow the motor/blade to stop rotating before switching “on” again.**
- ▶ **Do not rapidly switch off and on.**

Inserting the Battery

Insert the battery into the machine as shown. The battery must be felt to engage.

Switching On

Press the lock-off button **2** and hold while actuating the On/Off switch **1**.

Release the lock-off button **2** again.

Switching Off

Release the On/Off switch **1**.

Note: There is a short delay in the motor starting after engaging the on/off switch **1**.

Adjustment

Using the Adjustable Handle (see figure E)

The adjustable handle **5** can be set in various positions:

- ❶ To change the position, loosen the handle screw **4** and move the adjustable handle **5**.
- ❷ Tighten the handle screw **4** securely to fix the adjustable handle **5** in the adjusted position.

Adjusting the Trimmer Length (see figure F)

- ❶ Turn the adjusting collar **6** by 90°.
- ❷ Pull the shaft out to increase the height, or push the shaft in to decrease the height. Retighten the adjusting collar **6**.

Adjusting the Trimmer-head Angle (see figure G)

To change the cutting angle, press the foot pedal **12** down and move the shaft **7** to the requested position.

Release the foot pedal **12**.

Adjusting for Edging Mode (see figures H–I)

I Adjusting the trimmer-head angle:

- ❶ Press the foot pedal **12** down.
- ❷ Move the shaft **7** to the lowest position. Release the foot pedal **12** again.

I Moving the trimmer head:

- ❶ Loosen the adjusting collar **6**.
- ❷ Turn the shaft **7** by 90° to adjust the trimmer head **9** for trimming/edging as shown. Retighten the adjusting collar **6**.

Working Advice



Protect the battery from heat, for example continuous exposure to sun radiation and fire.

Product will not function if temperature is below 0 °C or above 45 °C!

Cutting Grass (see figure J)

Move the cordless trimmer left and right, keeping it well away from the body.

The trimmer can efficiently cut grass up to a height of 15 cm. Cut higher grass in stages.

Trimming Edges

Guide the cordless trimmer along the edge of the lawn. Avoid contact with paved surfaces, stones or garden walls, as this will wear the blade rapidly.

For better control, use the plant protector **19** (accessory) as a guide. (see figure K)


Cutting Around Trees and Bushes (see figure L)

- **Carefully cut around trees and bushes so that they do not come into contact with the blade.** Plants can die if you damage the bark.

For better control, use the plant protector **19** (accessory) as a guide. (see figure K)


Battery Duration

The battery duration is dependent on the working conditions:

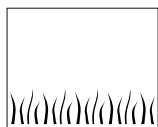


Light conditions:

up to 800 metres (ART 23 LI)
up to 1000 metres (ART 26 LI)

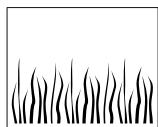

Medium conditions:

up to 350 metres (ART 23 LI)
up to 440 metres (ART 26 LI)

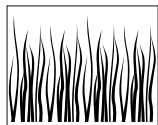

Tough conditions:

up to 60 metres (ART 23 LI)
up to 75 metres (ART 26 LI)

Changing the Blade (see figure D)

- **Warning:** Before any work on the machine itself, remove the battery from the machine.

To remove the worn blade **10**, push it inward until it snaps off of the pin **18**.

Clean the pin **18** of any residual plastic/debris with a sharp knife.

To mount a new blade **10**, place the blade **10** onto the pin **18**, push it down and pull it outward until it engages.

Note: Only use Bosch replacement blades. They have been developed specially for improved cutting and feed performance. The use of other blades will lead to a deterioration in performance.

Troubleshooting

The following chart lists problem symptoms, possible causes and corrective action, if your garden product does not operate properly. If these do not identify and correct the problem, contact your service agent.

- **Warning:** Switch off and remove the battery prior to any troubleshooting.

| Problem | Possible Cause | Corrective Action |
|--|---|--|
| Blade guard can not be mounted over cutting disc | Incorrect assembly | Remove cutting disc and mount blade guard again; also see "Assembly" |
| Trimmer fails to operate | Battery discharged | Recharge battery; also see "Battery Charging" |
| | Battery too hot/cold | Allow to cool/warm |
| Trimmer runs intermittently | Internal wiring of garden product damaged | Contact Service Agent |
| | On/Off switch defective | Contact Service Agent |
| Excessive vibrations/noise | Garden product defective | Contact Service Agent |
| | Blade broken | Replace the blade |

| Problem | Possible Cause | Corrective Action |
|---|---|--|
| Cutting time per battery charge too low | Battery has not been used for long period or only for short terms | Fully charge battery; also see “Battery Charging” |
| | Grass too high | Cut in stages |
| | Battery dead or defective | Replace the battery |
| Blade will not move | Battery discharged | Recharge battery; also see “Battery Charging” |
| | Garden product defective | Contact Service Agent |
| Garden product does not cut | Blade broken | Replace the blade |
| | Battery not fully charged | Recharge battery; also see “Battery Charging” |
| | Grass entangled around cutting disc | Remove grass |
| Continuous lighting of the battery charge indicator 13 | Battery not (properly) inserted | Properly insert battery into battery charger |
| No charging procedure possible | Battery contacts contaminated | Clean the battery contacts (e.g. by inserting and removing the battery several times) or replace the battery |
| | Battery defective | Replace the battery |
| Battery charge indicator 13 does not light up | Mains plug of battery charger not plugged in (properly) | Insert mains plug (fully) into the socket outlet |
| | Socket outlet, mains cable or battery charger defective | Check the mains voltage; have the battery charger checked by an authorised after-sales service agent for Bosch power tools |

Maintenance and Service

Maintenance and Cleaning

► **Warning:** Before any work on the machine itself, remove the battery from the machine.

Note: To ensure long and reliable service, carry out the following maintenance regularly.

Regularly check for obvious defects such as loose fixings, and worn or damaged components.

Check that covers and guards are undamaged and correctly fitted. Carry out necessary maintenance or repairs before using.

If the garden product should happen to fail despite the care taken in manufacture and testing, repair should be carried out by an authorised customer service agent for Bosch garden products.

In all correspondence and spare parts orders, please always include the 10-digit article number given on the type plate of the garden product.

After Use/Storage

- **Warning: Switch the machine off and remove the battery. Ensure battery is removed before storage.**

Clean the exterior of the machine thoroughly using a soft brush and cloth. Do not use water, solvents or polishes. Remove all grass and debris, especially from the ventilation slots **8**.

Turn the machine on its side and clean the cutting guard **11** inside. If grass cuttings are compacted, remove with a wooden or plastic implement.

Check if guards and protective devices are undamaged and properly mounted. Before using, carry out possibly necessary maintenance and repairs.

The battery should be stored between 0 °C and 45 °C.

After-sales Service and Customer Assistance

Our after-sales service responds to your questions concerning maintenance and repair of your product as well as spare parts. Exploded views and information on spare parts can also be found under:

www.bosch-garden.com

Our customer service representatives can answer your questions concerning possible applications and adjustment of products and accessories.

Great Britain

Robert Bosch Ltd. (B.S.C.)
P.O. Box 98
Broadwater Park
North Orbital Road
Denham
Uxbridge
UB 9 5HJ
Tel. Service: +44 (0844) 736 0109
Fax: +44 (0844) 736 0146
E-Mail: boschservicecentre@bosch.com

Ireland

Origo Ltd.
Unit 23 Magna Drive
Magna Business Park
City West
Dublin 24
Tel. Service: +353 (01) 4 66 67 00
Fax: +353 (01) 4 66 68 88

Australia, New Zealand and Pacific Islands

Robert Bosch Australia Pty. Ltd.
Power Tools
Locked Bag 66
Clayton South VIC 3169
Customer Contact Center
Inside Australia:
Phone: +61 (01300) 307 044
Fax: +61 (01300) 307 045
Inside New Zealand:
Phone: +64 (0800) 543 353
Fax: +64 (0800) 428 570
Outside AU and NZ:
Phone: +61 (03) 9541 5555
www.bosch.com.au

Republic of South Africa

Customer service

Hotline: +27 (011) 6 51 96 00

Gauteng – BSC Service Centre

35 Roper Street, New Centre
Johannesburg
Tel.: +27 (011) 4 93 93 75
Fax: +27 (011) 4 93 01 26
E-Mail: bsctools@icon.co.za

KZN – BSC Service Centre

Unit E, Almar Centre
143 Crompton Street
Pinetown
Tel.: +27 (031) 7 01 21 20
Fax: +27 (031) 7 01 24 46
E-Mail: bsc.dur@za.bosch.com

Western Cape – BSC Service Centre

Democracy Way, Prosperity Park
Milnerton
Tel.: +27 (021) 5 51 25 77
Fax: +27 (021) 5 51 32 23
E-Mail: bsc@zsd.co.za

Bosch Headquarters

Midrand, Gauteng
 Tel.: +27 (011) 6 51 96 00
 Fax: +27 (011) 6 51 98 80
 E-Mail: rbsa-hq.pts@za.bosch.com

Transport

Dispatch batteries only when the housing is undamaged. Tape or mask off open contacts and pack up the battery in such a manner that it cannot move around in the packaging. When dispatching lithium-ion batteries, compulsory labeling may be required. Please observe the respective national regulations.

Disposal

The garden product, accessories and packaging should be sorted for environmental-friendly recycling.

Do not dispose of garden products, battery chargers and batteries/rechargeable batteries into household waste!

Only for EC countries:


According to the European law 2002/96/EC, electrical and electronic equipments that are no longer usable, and according to the European law 2006/66/EC, defective or used battery

packs/batteries, must be collected separately and disposed of in an environmentally correct manner.

Batteries no longer suitable for use can be directly returned at:

Great Britain

Robert Bosch Ltd. (B.S.C.)
 P.O. Box 98
 Broadwater Park
 North Orbital Road
 Denham
 Uxbridge
 UB 9 5HJ
 Tel. Service: +44 (0844) 736 0109
 Fax: +44 (0844) 736 0146
 E-Mail: boschservicecentre@bosch.com

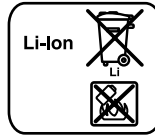Battery packs/batteries:**Li-ion:**

Please observe the instructions in section "Transport", page 17.

Subject to change without notice.